 


morphyrichards

4 Slice coolwall toaster

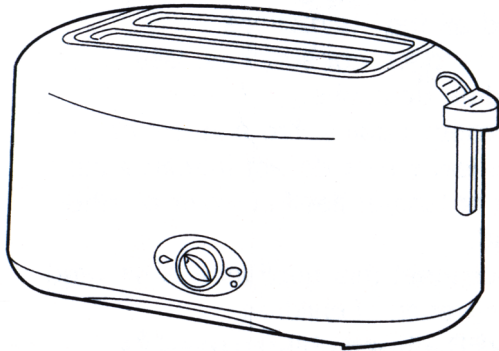

Please read and keep these instructions



Getting the best from
your new toaster...



www.morphyrichards.co.uk
www.morphyrichardsindia.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following

- 1 Read all the instruction.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against fire and risk of electrical shock do not immerse cord, plug or toaster in water or other liquid.
- 4 Ensure that this appliance is situated out of reach of children.
NEVER allow a child to use this product.
- 5 Unplug from the socket when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 Do not operate any appliances with a damaged plug, or after an appliance has malfunctioned, or has been dropped or damaged in any way. Contact Morphy Richards for advice on examination, repair or electrical or mechanical adjustment.
This appliance contains no user serviceable parts.
- 7 The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shocks or injury.
- 8 Do not use outdoors
- 9 Do not let the mains lead overhang the edge of the table or work-top, or touch hot surfaces.
- 10 DO NOT PLACE THE APPLIANCES ON OR NEAR A HOT FAS OR ELECTRIC HOB, OR IN A HEATED OVEN.
- 11 Do not attempt to move the appliances whilst hot.
- 12 When unplugging turn any control to off, then remove plug from wall socket.

Save these instructions

- 13 Do not use appliances for other than intended use.
- 14 Preheating of this appliance is not required
- 15 DO NOT TOUCH THE METAL TOP OF THE TOASTER DURING OR AFTER USE AS THIS GETS VERY HOT.
- 16 ENSURE THAT SUFFICIENT SPACE LEFT ABOVE AND AROUND ALL SIDES OF YOURS TOASTER TO ALLOW AIR TO CIRCULATE. PLACE THE TOASTER ON HEAT RESISTANT SURFACE. DO WATCH YOUR TASTER DURING USE. A FIRE MAY OCCUR IF TASTING ARE COVERED OR TOUCHING FLAMMABLE MATERIAL, INCLUDING CURTAINS, DRAPERIES, WALLS ETC. WHEN IN OPERATION.
- 17 Do not use underneath cupboards.
- 18 Oversize foods, metal foil packages, or utensils must not be inserted into a toaster, as they may involve a risk of fire or electric shock.
- 19 Do not attempt to dislodge food when toaster is plugged in and never introduce cooking utensils into the slots.
- 20 Do not place bread or other items on top of the bread slots as this will damage your toaster and create a fire hazard.
If your toaster does not work, check the following points:
 - 21 Has toaster been set correctly - is the plug in its socket and the switch in the 'on' position?
 - 22 Is the plug itself or the socket faulty - check this by plugging in another appliance
 - 23 Does the fuse need replacing - if you have fitted your own plug, are the internal plug connections secure and correctly made?
 - 24 Do not lift or move the toaster by inserting fingers in bread slots.

Electrical requirements

Check that the voltage on the rating plate of your appliances corresponds with your house electricity supply which must be A.C. (Alternative Current)

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

 
IMPORTANT : THE PLUG REMOVED FROM THE MAINS LEAD, IF SERVED, MUST BE DESTROYED AS A PLUG WITH BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED INTO ALIVE SOCKET OUTLET.

If you use a 13 amp BS 1363 plug, a 13 amp BS1362 fuse must be fitted.

WARNING : THIS APPLIANCES MUST BE EARTHED.

Features of your toaster


- 1 Removable crumb tray
- 2 Electronic variable browning control
- 3 Cord storage
- 4 Cancel button
- 5 Bread carriage lever/high lift feature
- 6 Bread slots

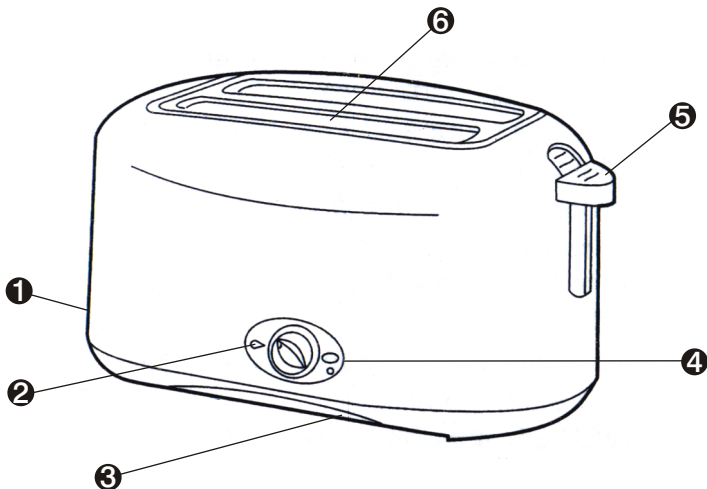

Instructions for use

Please read before use, taking careful note of points 1 and 2.

 - 1 Use your toaster once without bread. This will pre-heat the new elements and burn off any dust which may have accumulated during storage.
- 2 Select the desired level of browning on the browning control ② marked 1 to 8. The setting required will vary according to the moisture content and thickness of bread. For best result ensure that the bread slices are of even thickness, freshness and size Remember that stale bread toasts more rapidly than fresh and thin bread toasts quicker than thick. See additional points for more information.
- 3 After selecting the desired level, place your bread in the slots ⑥ and depress the bread carriage lever ⑤ downwards until it locks.

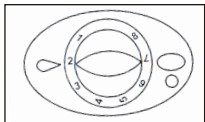

Note: The bread carriage lever will not stay down unless the toaster is plugged in and the wall switch is on.

- 4 After the set degree of brownness has been reached the bread will pop-up automatically ready for removal from the slots. The bread carriage lever will have returned to its upper position and the heating element will have switched off. ready for case of for the next tasting.
- In the case of frozen bread you should set the browning level one number higher than you would normally select for fresh bread.
 - If the first slice are not dark enough turn the browning control to a higher setting.
 - If the bread in your toasted becomes jammed disconnect your toaster at the socket, allow it to cool, then remove the bread.

- When not in use, switch your toaster off at the main and remove the plug from the socket. **DO NOT WARP THE CABLE AROUND THE MAIN BODY OF THE APPLIANCES DURING OR AFTER USE. THE CABLE STORAGE AREA UNDERNEATH THE TOASTER SHOULD BE USED.**

Using the cancel setting ○

If you wish to interrupt the toasting process, press the cancel button. ④

Using the high lift release ▲

 
If small bread is toasted, this may be removed more easily by lifting the bread carriage lever.

Cleaning and maintenance

- 1 After use and before cleaning, switch off at the mains, remove the plug and wait for the toaster to cool.
 - 2 Wipe the outside of the toaster with a damp cloth only and dry with another cloth or tissue.
- NEVER use metal polish or course scouring agents and never immerse your toaster in any sort of liquid.
 - NEVER use any pointed or sharps article for cleaning the inside, otherwise the heating element will be damaged.
 - NEVER use a brush or push your fingers or metal objects down the slots.

Crumb tray

Crumb will accumulate in the crumb tray and coals catch fire if emptied periodically. When the toaster has cooled down completely, tap the sides of the case lightly to dislodge in the toasting chamber and pull out the

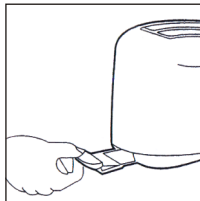

crumb tray. Empty the tray and replace it.

Never operate the toaster without the crumb tray fitted.

Technical Data

Power Supply : 230V, 50Hz

Wattage : 900W

Morphy Richards products are intended for household use only

Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

Products & parts are indicative only, the actual product may differ.

morphy richards

Morphy Richards Ltd, Mexborough,
South Yorkshire, England, S64 8AJ