


morphyrichards

Electric Pressure Cooker 80CGT

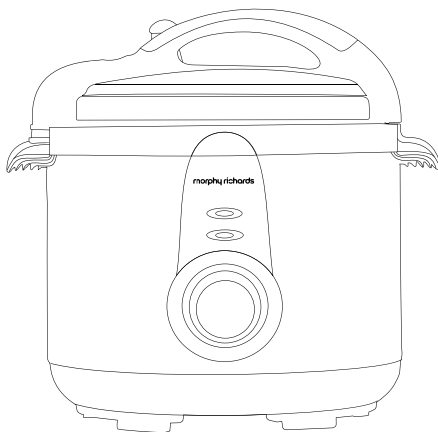

Please read and keep these instructions



getting the best from
your new Electric Pressure Cooker



www.morphyrichards.co.uk
www.morphyrichardsindia.com

Technical Data

• Power Supply : 230V AC 50Hz

• Wattage : 800W

Features

The electric pressure cooker, a new kitchen appliance has the latest technology with combined merits of the pressure cooker, and electric cooker . The salient features of this product are as under :

1. Combined functions of cooking, stewing and braising.
 2. Does not need to set the pressure and time. Just select the menu, the cooker will cook the food automatically. When the bell rings and enters warm status, the food is ready to be served.
 3. Airtight cooking retains nutrition and original taste.
 4. Non stick coated cooking pan is easy to clean. Stainless lid and outer body ensure long service life.
- 5. Built-in safety devices:**

- The cooker can not gain pressure when the lid is not closed properly and the lid can not be opened when the inner pressure is too high.

- **Relief function :** When temperature and pressure inside the cooker go beyond the normal value. The pressure discharging valve will discharge the steam to normal value.

- **De-pressure function:** When pressure limit device of the cooker fails and pressure goes up beyond the limit cooker automatically releases the steam pressure around lid to avoid an explosion.

- **Temperature limit:** Power automatically cuts off when temperature inside the cooker goes beyond preset temperature.

- **High temperature safe:** Power automatically cuts off when temperature inside cooker goes beyond limit value.

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.

2. Do not touch hot surfaces. Use oven gloves or a cloth when lid or handling hot containers.

3. To protect against fire, electrical shock and personal injury do not immerse cord, plugs, or the cooker in water or other liquids.

4. Close supervision is necessary when any appliance is used by or near children.

5. Unplug from outlet when not in use or before putting ON or taking off attachments Or before cleaning. Allow to cool before putting on or taking off parts.

6. Do not operate the cooker with a damaged cord or plug or if the cooker malfunctions or has been damaged in any manner. Please bring the cooker to the nearest Morphy Richards authorized service center for examination, repair, or adjustment.

7. The use of accessory attachments not recommended by Morphy Richards may cause injuries.

8. Do not use outdoors (this item may be omitted if the product is specifically intended for outdoor use).

9. Do not let cord hang over edge of table or counter, or touch hot surfaces.

10. Do not place on or near a hot gas or electric burner, or in a heated oven.

11. Extreme caution must be used when moving an appliance containing hot oil or other liquids.

12. Always attach the detachable power cord plug to the cooker first, then into the wall outlet. To disconnect, turn any control

in use to OFF position then remove plug from wall outlet.


13. Do not use appliance for other than its intended use.

14. Relief pipe (refer to part 5 in the part

diagram) should be checked regularly to ensure that it not blocked.

15. Save these Instructions.

Part diagram

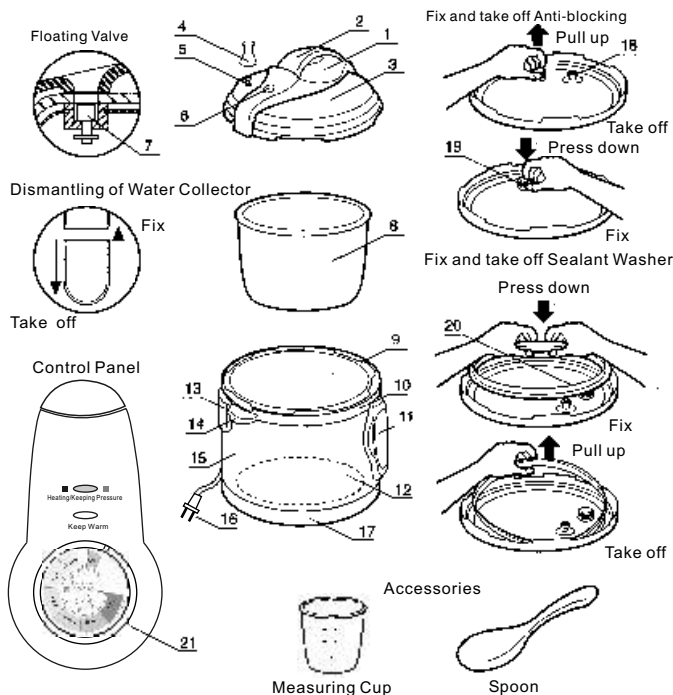


1. Hande
2. Handle Decorating Bar
3. Lid
4. Pressure discharging Valve
5. Relief Pipe
6. Floating Valve
7. Bobber Valve
8. Cooking Pan
9. Outer Tank
10. Upper Ring
11. Control Panel

12. Heating Plate
13. Water Collector
14. Handle
15. Cooker
16. Power Cord
17. Lower Base
18. Sealant Washer
19. Anti-Blocking Case
20. Sealant Washer
21. Knob

Control Panel

Heating/Pressure Keeping Indicator




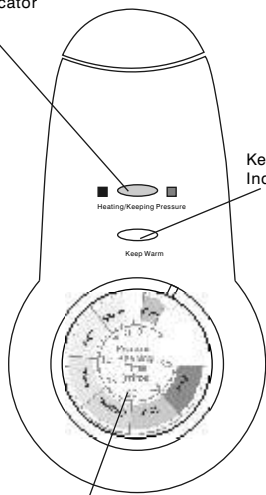


Pressure Keeping timer


Directions

1. open the lid: Hold firmly the handle, turn the lid clockwise until it loosens. (Figure 1 & 2)

  2. Take out the cooking pan, and fill in food and water. Food and water should not be higher than 4/5 and lower than 1/5 of the height of inner tank. (Figure 3, 4 & 5).

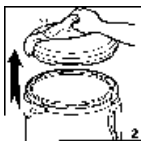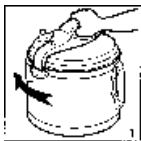

3. Clean the cooking pan and heating plate before placing the cooking pan in the cooker. Ensure that no dirt or smear is sticking to heating plate and outer tank. Now move the cooking pan slightly to ensure that it has proper contact with the heating plate. (Figure 6).


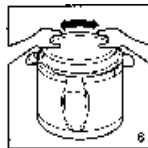


4. Place the lid on the cooker.

- Check the sealant washer, ensure that it is placed on the inner steel ring.


- Turn the Sealant washer to ensure that it is properly fitted to the steel ring.

- Cover up the lid and turn it counter-clockwise until it gears with a clamping

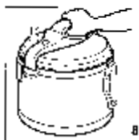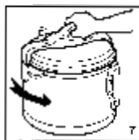

sound (Figure 7, 8).

5. Keep the pressure relief valve in place, ensure that the floating valve is down in position. (The floating valve should be down in place before heating). (Figure 9).

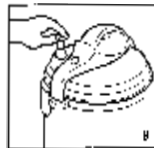

6. Switch ON the power, the heating indicator will illuminate. (If the keep pressure time is not set then the heating indicator will not illuminate and keep warm indicator will illuminate. The cooker is in keep warm status.

7. Set keep pressure time as per the requirement of a particular food.

- Refer to cooking guide to set keep pressure time.


Cooking Guide

Food	Pressure Keeping time (mins)
Steam	3-5
Rice	5-10
Meat	10-15
Chicken	15-20
Soup	20-25
Bean	25-30

• The function select button is marked with different pressure keeping timings for different types of foods. pressure keeping timings can be set for different foods.


• Working time is heating time plus pressure keeping timings. Heating time depends up on quantity of food.

• Turn the button to the desired position. Heating indicator will illuminate and cooking starts. (Figure 10)

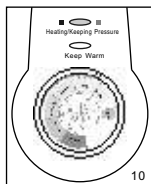

Example: For rice cooking, set the pressure keeping timings to 6 minutes.

• Heating indicator will illuminate. When the working pressure reaches, the cooker enters the keep pressure programming. When the function

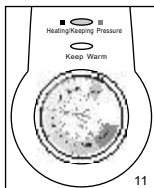

button turns to 'OFF' position the cooking is over. 'Keep warm' indicator illuminates. The cooker is in 'keep warm' mode. (Figure 11)

8. Open lid and take out the cooking pan.

• Unplug power plug.

• Firmly hold the handle, turn the lid clockwise until it is loosen, then pick up the lid. (Figure 12)

Cleaning

1. Unplug the power cord prior to cleaning.
2. Brush the bottom of the cooker with a mop. Never immerse the cooker in water or spray water on it.
3. Take off and clean the water collector and wash it with a wet towel.
4. Clean the inner side of the cooker including the sealant washer, pressure discharging valve, anti-blocking case, steam relief pipe & floating valve with water and clean it with a mop. Let these parts dry thoroughly.
5. Use a sponge or non metal soft brush to clean the cooking pan with soapy water rinse with clean water. Let it dry thoroughly.



Morphy Richards products are intended for household use only

Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

Products & parts are indicative only, the actual product may differ.

morphy richards

Morphy Richards Ltd, Mexborough,
South Yorkshire, England, S64 8AJ