


**morphy richards**

# Travel Kettle 0.5L

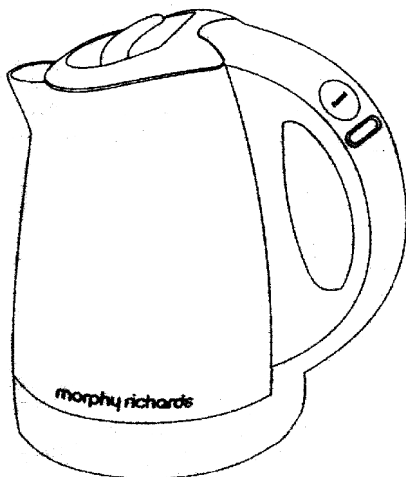

Please read and keep these instructions



Getting the best from  
your new kettle...

**2year**  
guarantee  
2 años de garantía 2 ans de garantie

[www.morphyrichards.co.uk](http://www.morphyrichards.co.uk)  
[www.morphyrichardsindia.com](http://www.morphyrichardsindia.com)

## **IMPORTANT SAFETY INSTRUCTIONS**

---

The use of any electrical appliances requires the following of basic common sense safety rules.

Primarily there is danger of personal to property and the appliances. These are indicated in the text by the following two conventions.

**WARNING** : danger of personal injury.

**IMPORTANT** : Damage to he appliances In addition we offer the following essential safety advice.

### **Location**

---

- Always locate your kettle away from the edge of a worktop.
- Ensure that the kettle os used on a firm flat surface.
- Do not locate the base until on a metal tray or metal surface

### **Mains lead**

---

- The mains lead should reach from the socket to the base unit without straining the connections.
- Do not let the mains lead hang over the edge of a work top where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and table. Do not let the lead run across a cooker or toaster or other hot area which might damage the cable.
- Do not place the kettle where the mains lead could fall into a sink.

## **Your safety**

---

- Always pour hot water slowly and carefully without tipping the kettle too fast to prevent splashing and spillage.
- Extreme caution must be used when moving a kettle containing hot water Do not touch hot surface, use handles or knobs.
- Always close the lid securely, otherwise the kettle may not switch of automatically and may split out boiling water.
- Avoid contact with steam from the spout when the water is boiling or just after it has switched off.
- Take care if opening the lid for re-filling when tea kettle is hot.
- Do not fill above the MAX mark, otherwise boiling water may be ejected.
- Do not hold the switch in the position or tamper with the switch to fix it in the on position as this may cause steam to be ejected and could damage the switch- off mechanism.
- Unplug to cool before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.

## **Children**

---

Never allow a child to operate this appliance. Children are vulnerable in the kitchen particularly when unsupervised and if appliances are being used or cooking is being carried out.

Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching

## Treating scalds

Run cold water over the affected area immediately. Do not stop to remove clothing get medical help quickly.


## Other safety considerations

- To protect against fire, electric shock and personal injury do not immerse cord, plug or kettle in water or other liquid.
- Do not operate any appliances with a damaged cord or plug or after the appliances malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer as there is the danger of fire, electric shock or personal injury.

- Do not use the kettle for any use other than to boil water.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Unplug from outlet when not in use.

## Description of parts

- ① Lid
- ② Spout
- ③ Spout filter
- ④ Reset button
- ⑤ Neon indicator for kettle operation
- ⑥ Handle
- ⑦ Main Body

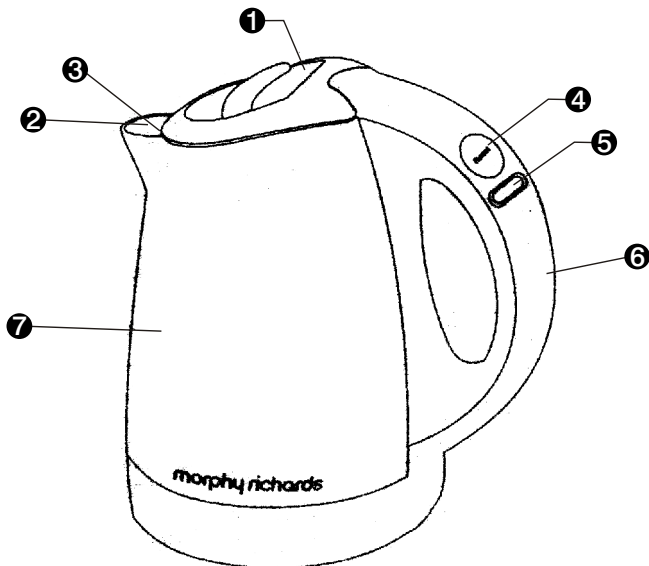

## Electric requirements

Check that the voltage on the rating plate of your appliances corresponds with your house electricity supply which must be A.C. (Alternating Current)

**WARNING :** The plug removed from the mains lead, if served, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

**WARNING :** This appliances must be earthed.

## Using

1 Fill the kettle with through the spout

- Always fill through the spout, as this helps to free the filter from limescale build - up.
  - Do not fill the water above the 'MAX' mark integrated on the inner wait of the kettle.
  - Always put in enough water to cover the bottom of the kettle.
  - Boil only as much water as you need as this saves electricity.
- 2 When the water boils, the kettle will switch off automatically.
- If you are using kettle for the first time pour

away the boiled water and refill.

- 3 To re boil, switch to ON again. if the kettle has just switched off wait a minute or so before switching it back on again.
- If you do not put in enough water, or switch on the kettle when it is empty, the safety cut-out will switch off the power automatically. If this happens, wait a few minutes for the element to cool, then refill and use as normal.

## Cleaning

**WARNING:**

Always Disconnect the plug from the mains and allow the kettle to cool down before cleaning.

Wipe the outside of the kettle with a damp cloth.

**IMPORTANT:** Do not use abrasive cleaners on the outside of the kettle which may scratch the surface.

## Technical Data

Power Supply : AC 230V 50Hz

Wattage : 1000W

*Morphy Richards products are intended for household use only*

*Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.*

*Products & parts are indicative only, the actual product may differ.*

**morphy richards**

Morphy Richards Ltd, Mexborough,  
South Yorkshire, England, S64 8AJ