 


morphyrichards

Stainless steel travel jug kettle

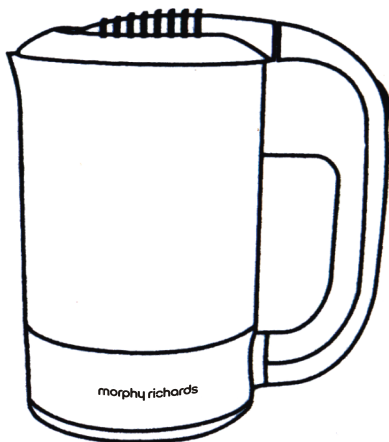

Please read and keep these instructions



getting the best from
your new kettle...

2year
guarantee
2 años de garantía, 2 ans en garantie

www.morphyrichards.co.uk
www.morphyrichardsindia.com

Important Safety

Instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition we offer the following essential safety advice.

Location

- Always locate your kettle away from the edge of the work top.
- Insure that the kettle is used on a firm, flat surface.
- Do not use the kettle outdoors or in a bathroom.

WARNING: Do not place the kettle onto a mettles tray or mettles surface whilst in use.

Children

- Children do not understand the dangers associated with operating electrical appliances never allow children to use this appliance.
- Teach the children to be aware of the dangers in the kitchen, them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.

Mains lead

- The mains lead should reach from the socket to the kettle without straining the connections.
- Do not let the mains lead hang over the edge of the work top where a child could reach it.
- Do not let lead run across an open space e.g. between a low socket and table.
- Do not let the lead across a cooker or

toaster or other hot area which might damage the cable.

- Do not place the kettle where the mains lead could fall into a sink.

Your safety

- Always pour hot water slowly and carefully without tipping the kettle too fast to prevent splashing and spillage.
- Extreme caution must be used when moving a kettle containing hot water.
- Do not touch hot surfaces, use handles or knobs.
- Always close the lid securely, otherwise the kettle may not switch off automatically and may spit out boiling water.
- Avoid contact with steam from the spout when the water is boiling or just after it has switched off.
- Take care if opening the lid for re-filling when the kettle is hot.
- Do not fill above the MAX mark, otherwise boiling water may be ejected.
- Do not hold the switch in the on position or tamper with the switch to fix it in the on position as this may cause damage to the switch-off mechanism.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.

Treating scalds

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

Other safety considerations

- To protect against fire, electric shock and personal injury do not immerse cord, plug or kettle in water or any other liquid.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Ring the service center for advice

on examination and repair.

- The use of attachments of tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the kettle for any use other than to boil water.
- Do not use outdoors.
- Do not place the kettle on or near a hot gas or electric burner or in a heated oven.
- Unplug from the outlet when not in use.

Electrical requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- For appliances with fitted plug. If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug

 
should be removed and the appropriate one fitted.

Warning: The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

WARNING: THIS APPLIANCE MUST BE EARTHED.

Features

- 1 Lid
- 2 Lid knob
- 3 Concealed element
- 4 On switch
- 5 Power on neon
- 6 Water level indicator (inside the kettle)
- 7 Cups x 2

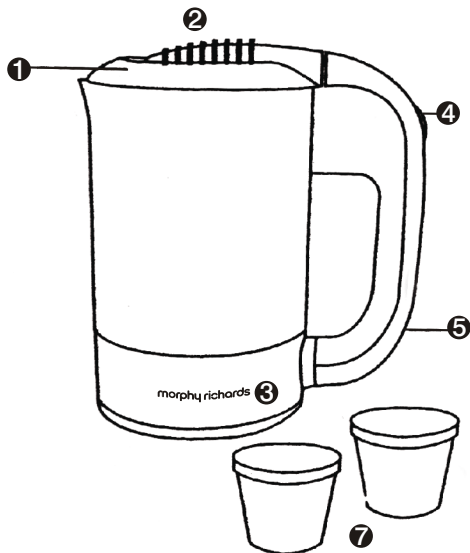

IMPORTANT

The mini jug can be used on voltages between 110v and 240v AC.

 
Ensure the correct plug adaptor is used when operating in a country not using the Indian socket system. If in doubt consult a competent electrician.

- If using the plug on a 110v supply, the water will take considerably longer to boil.

Using

Filling the kettle

- 1 Hold the lid knob and pull upwards to remove the lid completely.

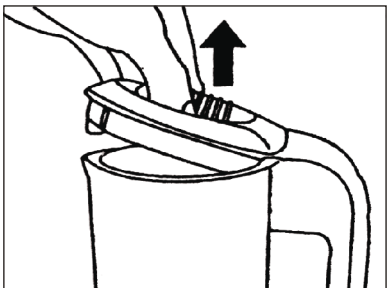

- 2 Fill the kettle up to the maximum mark.
 - 3 Replace the kettle lid, plug in and switch on at the wall socket.
 - 4 Switch the kettle on. The 'power on' neon will light up.
 - 5 When the water boils the kettle will switch off automatically.
- If you are using the kettle for the first time, pour away the boiled water and refill.
- 6 Lift the kettle by the handle ensuring you hold the kettle level.

- 7 To re-boil, switch to ON again. If the kettle has just switched off wait a minute or so before switching it back on again. This will allow the switch to cool and reset.

- This product is designed for use with 0.5 litre of water. If hot water is left in the kettle it may take longer to re-set. In this case refill with cold water to the 0.5 litre maximum mark.
- If you do not put in enough water, or switch on the kettle when it is empty. The safety cut-out will switch of the power automatically. If this happens, refill and wait a few minutes for the element to cool, then use as normal.

Descaling

IMPORTANT: As this kettle is fitted with a concealed element it must be descaled regularly. Frequency of descaling depends on usage and the hardness of the water in your area.

Exclusive scale can cause the kettle to switch off before boiling and may damage the element invalidating the warranty.

It is essential the regular descaling takes place.

Remove hard scale using a property descaling product suitable for the stainless steel kettle. Alternatively use a citric acid crystals (available from most pharmacies) as follows.

- 1 Fill the kettle, boil, then unplugged the kettle and stand it in an empty sink or bowl.
- 2 Add 15gm of citric acid crystals to the water gradually, then leave the kettle to stand. Do not use a more concentrated solution.
- 3 As soon as the effervescence subsides, empty the kettle and rinse it thoroughly with cold water.
- 4 Wipe the outside of the kettle thoroughly with a damp cloth to remove all traces of acid which may damage the finish.

Important: Ensure that the electrical connections are completely dry before using the kettle.

Cleaning

Warning: Always disconnect the plug from the mains and allow the kettle to cool before cleaning.

Wipe the outside with a damp cloth.

Important: Do not use abrasive cleaners on the outside of kettle which may scratch the surface.

Technical data

Power supply : 120-240V 50-60Hz

Wattage : 1090W MAX

Morphy Richards products are intended for household use only

Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

Products & parts are indicative only, the actual product may differ.

morphy richards

Morphy Richards Ltd, Mexborough,
South Yorkshire, England, S64 8AJ