


morphyrichards

Icon mixer grinder

Essentials



Please read and keep these instructions

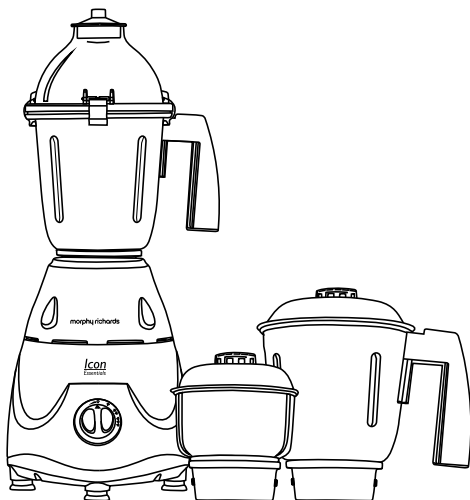

2year
guarantee
2 años de garantía / 2 ans de garantie

600
watts
POWERFUL
MOTOR

5year
guarantee
on
MOTOR



getting the best from
your new mixer grinder...

www.morphyrichards.co.uk
www.morphyrichardsindia.com

Important Safety

Instructions

The use of any electrical appliance requires the following of basic common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition we offer the following essential safety advice.

Location

- Do not use outdoors.

Mains Lead

- The mains lead should reach without straining the connections.
- Do not let the mains lead hang over the edge of a worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and table.
- Do not let the lead run across a cooker or toaster or other hot area which might damage the cable.

Your Safety

- Keep the Mixer Grinder at least 6" (150mm) away from the wall.
- Have sufficient place around the Mixer Grinder to keep the various items and ingredients required.
- Don't touch moving parts & blades when the Mixer Grinder is in operation.
- To protect against electrical hazards, do not immerse any part of the Mixer Grinder like base, plug or cord in water or any other liquids.
- Never operate your Mixer Grinder without lid and lid cap.
- Never operate your Mixer Grinder unless there is load in the jar.
- Do not pull the cord to disconnect, instead grasp the plug and pull to disconnect.
- Always disconnect the plug from the power outlet before cleaning, while emptying and when not in use.

- Do not let the power cord hang over the edge of table/counter or touch any hot surface. If the plug or cord is damaged, do not use the appliance.
- In the event of any failure of your Mixer Grinder, do not attempt to repair it at home or allow any unauthorised person to do so. Ensure repairs are carried out only at an authorised Morphy Richards Centre.

Children

- Do not allow children to use this mixer grinder. Children are vulnerable in the kitchen particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of danger in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.

Other Safety


Considerations

- To protect against fire, electric shock and personal injury do not immerse cord, plug or mixer body in water or other liquid.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer as there is the danger of fire, electric shock or personal injury.
- Do not place on or near a hot gas or electric burner or in a heated oven.

Electrical Requirements

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

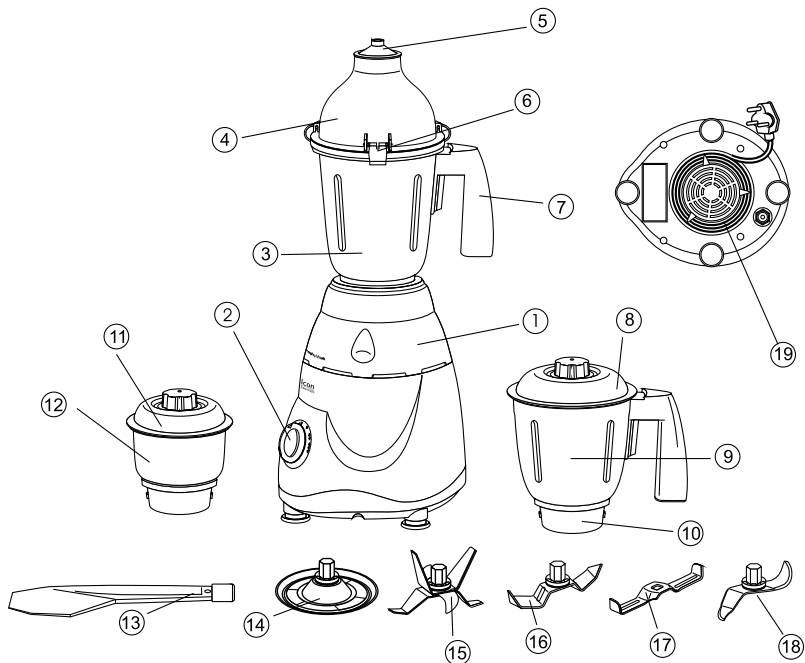

Features

- (1) Main Unit
- (2) Speed / Incher Selector Knob
- (3) Liquidising Jar
- (4) Dome for Liquidising Jar
- (5) Dome cap for Liquidising Jar
- (6) Lid Clamp
- (7) Jar Handle
- (8) Flat Lid for Dry/Wet Grinding Jar
- (9) Dry/Wet Grinding Jar
- (10) Jar Base
- (11) Chutney Jar Lid
- (12) Chutney Jar
- (13) Spatula

- (14) Whipping Blade
- (15) Liquidising Blade
- (16) Hardened Universal Grinding Blade
- (17) Chuney Grinding Blade
- (18) Mincing Blade
- (19) Cord Winder

Your mixer grinder is designed to help you prepare everything from soups to chocolate mousse quickly and with minimal effort.

Unpacking Your Mixer Grinder

Carefully unpack your mixer grinder, as blades are very sharp.

Assembly

WARNING: Make sure that the mixer grinder is switched off and unplugged.




1. Clean the mixer grinder attachments before using it for the first time with damp cloth.
2. Insert the mixer grinder blades into the appropriate jar and turn until it locks into position.
3. Place the jar on the main unit through the jar base.
4. Put the ingredients to be processed in the jar.
5. Fix the appropriate jar lid firmly on the jar ensuring that the lid has locked in securely from all side.
5. The mixer grinder can now be plugged in and is now ready to use.
6. Use speed control knob (2) and move gradually from lower to higher speeds.
After use, unplug the mixer grinder.

Using the mixer grinder

Using the mixer grinder for the first time

Before you start the machine for the first time or after a long period of non-usage;


- Please rotate the motor shaft by hand to ensure that it turns freely & smoothly (Fig.2). Make sure the unit is not connected to the power source.
- Before fixing the jar to the main unit, rotate the jar coupler to ensure that it turns freely (Fig.3).
- Each jar comes fitted onto an aluminium base that has to be fitted onto the main unit. Hold the base and rest it on the main unit (Fig.4).
- Plug the mains cord in the wall socket & switch the power ON.

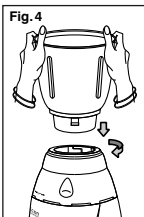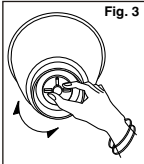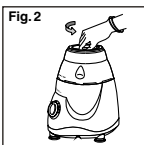

Chutney Jar

This jar can be used to grind small quantities of jeera, dhania, coconut, green chilli, pepper, garam masala etc.

- Put the ingredients to be ground in the chutney jar.
- Hold the lid (Fig.5) & press it down firmly on the chutney jar, ensuring that the lid has locked in securely from all sides.
- Place the chutney jar on the main unit through the jar base.
- The substance to be ground should not be too large. Cut/break ingredients into smaller pieces.

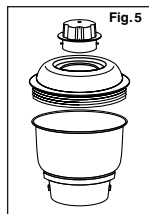


Note:

- Do not add too much water while using this jar.
- Do not run the mixer continuously as it tends to rob the ingredients of their flavour — thus short spurts would be preferable.
- While dry grinding, friction may heat up the jar, this is not abnormal.

Wet / Dry Grinding Jar

This jar (Fig.6) can be used for grinding items like idli and dosa batter, coconut chutney, groundnut, red chilli, sugar, palak etc.

- Fill the jar with the ingredients, upto 2/3 of capacity of the jar & add some water as per the desired quantity (in case of wet grinding).
- Put the flat lid on top of the jar, clamp it and fit it onto the main unit.
- Grind at a low speed for about 15 sec and then move to higher speeds. Keep adding water till you achieve desired consistency .

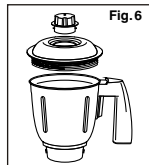

Note:


- Always ensure that the lid is in place before starting.

- Don't add all the water at a time. Instead add it in smaller quantities as and when required.
- Always move gradually from lower to higher speeds.
- Use the handle of the jar for pouring out the contents.

Blending and Liquidising Jar

This jar can be used to perform all types of blending & liquidising operations such as preparation of lassi, milk shakes, purees, juices, etc

- Fill the jar with the solids to be liquidised such as tomatoes or watermelon and fit the jar onto the main unit (Fig.7).
- Put the Dome Assembly on to the jar and clamp it. Put the Dome Cap into place.
- If needed more water can be added by removing Dome Cap.
- Now switch on the mixer for under a minute & you will get finely blended juices & purees.

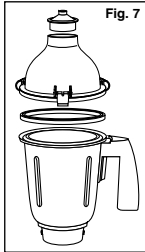


Note:

- Always ensure Dome Lid and Dome Cap are in place before starting.
- Use incher button for better results
- Use the handle of the jar for pouring out the contents.
- **DO NOT use this jar for Grinding.**

Blades and their Functions


(1) Hardened stainless steel universal grinding blade :

To be primarily used for wet as well as dry grinding. It can be also used for liquidising, whipping and grating functions.

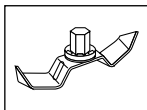


(2) Stainless steel liquidising blade:

For blending and liquidising.

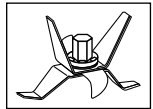


(3) Stainless steel whipping blade :

For whipping operation.

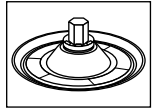


(4) Stainless steel mincing blade

For mincing and grating operation

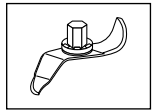

(5) Stainless steel chutney grinding blade

For grinding chutney and small quantities of spices.

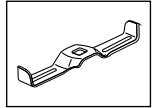


How to care for your Mixer Grinder


CLEANING AFTER USE

Caution : Be sure to switch off your Mixer Grinder after use. Wait until the blades come to a halt before removing the cover.

- After each use it is highly desirable to wash & thoroughly clean the jar, blade and the lids.
- Firstly remove the main plug from the wall socket. Gently detach the jar from the main unit.
- Open the lid & empty the contents.
- To remove the blade assembly, use a spoon to stop the blade from rotating and use Spatula to gently loosen/unscrew the plastic dome nut of blade assembly in clockwise direction (Fig.8). The jar can be cleaned using some warm soapy water. Then rinse with clean water & wipe dry with a soft damp cloth. Do not keep the jar immersed in water.

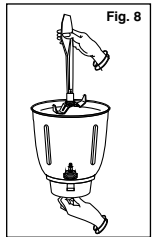


- Do not immerse the main unit in water. The main unit can be cleaned using a damp cloth.
- Cleaning is easy & best done immediately after use.

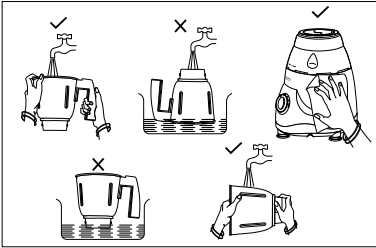

OVERLOAD PROTECTOR (OLP)

- The OLP is designed to protect your motor from burning.
- When the jar is filled more than what is specified or the liquid is too viscous, the OLP trips and the motor stops automatically.
- When this happens, reduce the quantity of material being ground or add some water.
- To restart, press the OLP button located at the bottom on the mixer base (Fig. 9).
- Wait for a while and then start your Mixer Grinder again.

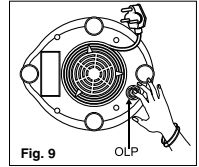

Trouble Shooting Guide

Note : In case the following measures do not work, please take the Mixer Grinder to the nearest Authorised Service Centre.

PROBLEM	CAUSE	CORRECTIVE ACTION
The mixer does not start	No power supply Tripped due to to overload	Ensure Power Supply Switch off the supply. Remove excess load and reset the OLP located at the bottom of the mixer base. (If it still does not work, contact the nearest Morphy Richards Service Centre).
The result / performance is 2/3 not satisfactory	Overloading Size of ingredients not proper Wrong Jar / Blade used	Fill the Chutney Jar up to the level of blades & the other 2 jars up to of capacity level indicated. Cut / Break down the ingredients to be ground into appropriate size. Ensure that you are using the jar / blade for its right / intended purpose.
Mixer generates abnormal noise	Jar is not locked properly Blade assembly loose Coupler loose	Lock the jar properly Tighten dome nut of blade assembly properly. Tighten Coupler

Technical Data

Power Supply : AC 230V~50Hz
Motor Wattage & R.P.M : 600W 20,000 R.P.M.

Motor Rating : 30 mins.

Morphy Richards products are intended for household use only

Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

Products & parts are indicative only, the actual product may differ.

morphy richards

Morphy Richards Ltd, Mexborough,
South Yorkshire, England, S64 8AJ